

Clear with green fractures
U11-25-96




Light green cathedral
S121SF




Cherry red cathedral
S151SF



Pot white opal
S200SF

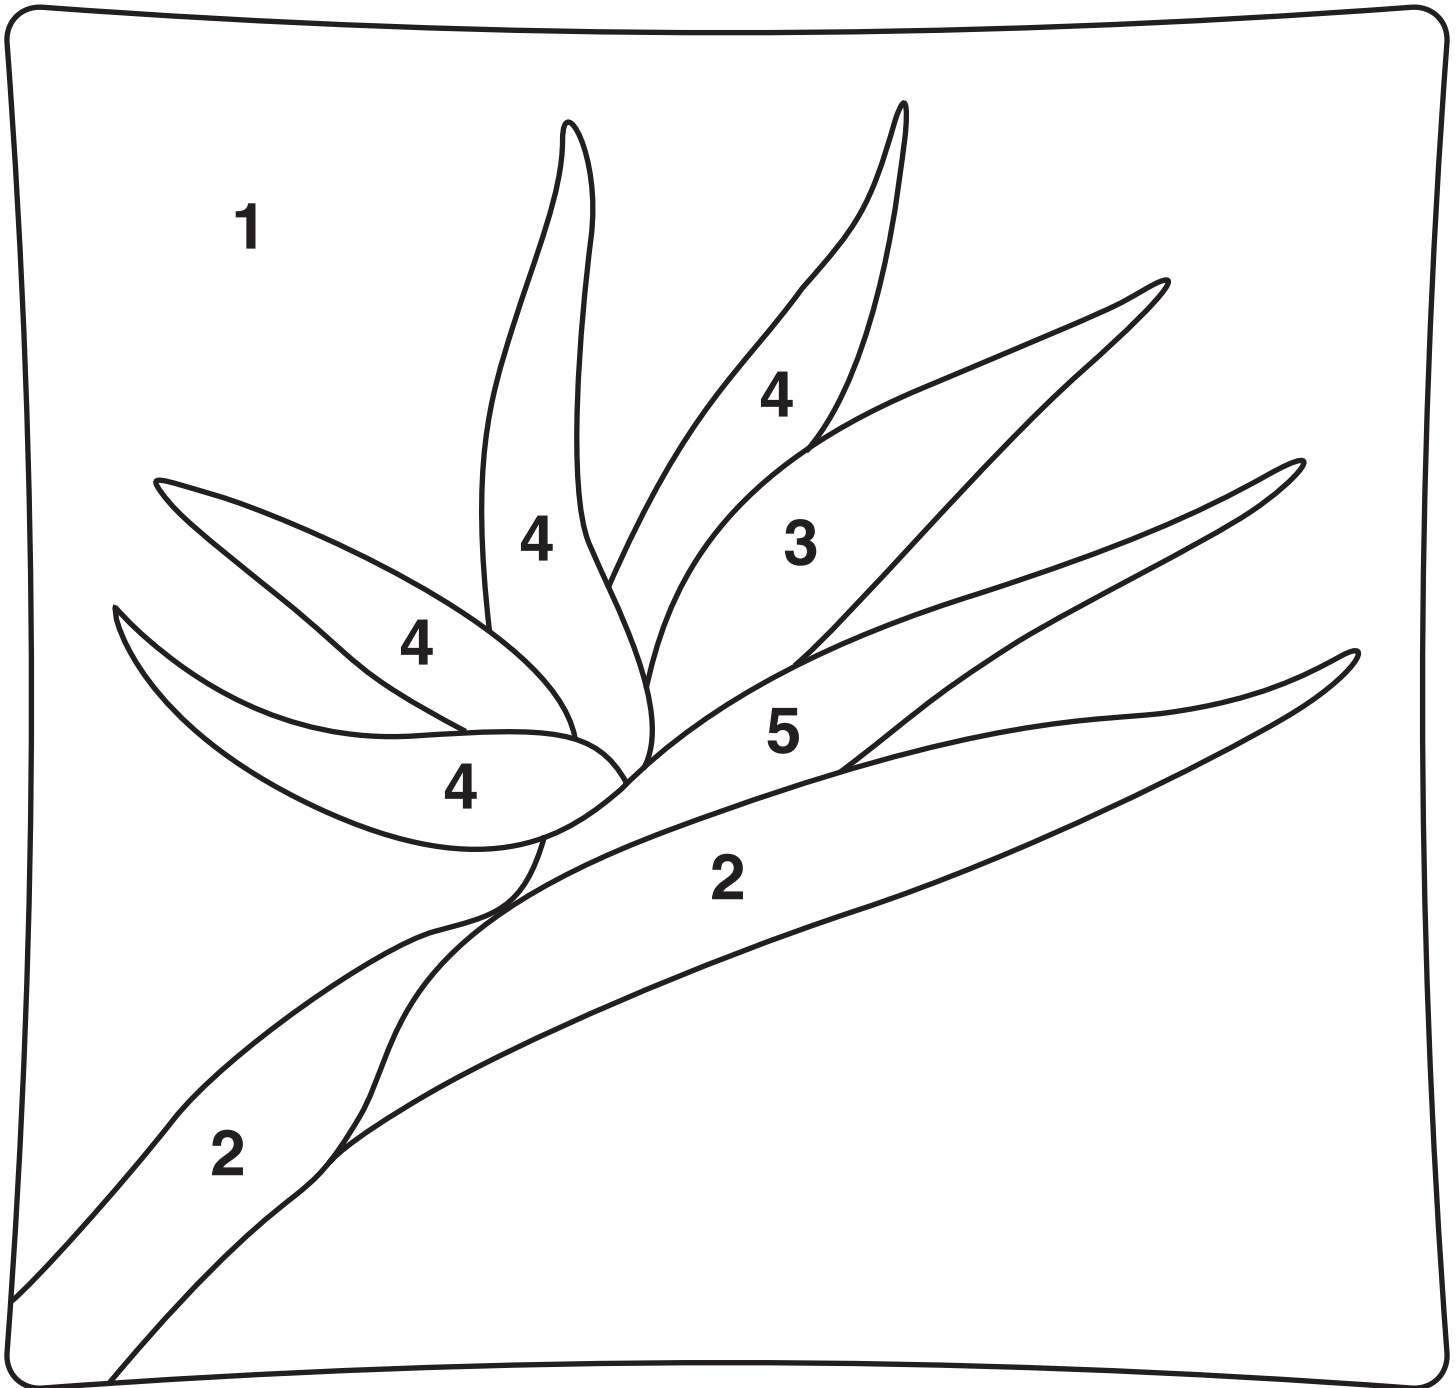

Clear with green fractures
U11-25-96

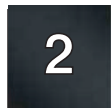

Black cathedral
S1009SF



Deep cobalt opalized
S230-76SF




Marigold opalized
U60-555-96



Red opalized
U60-2502-96

1

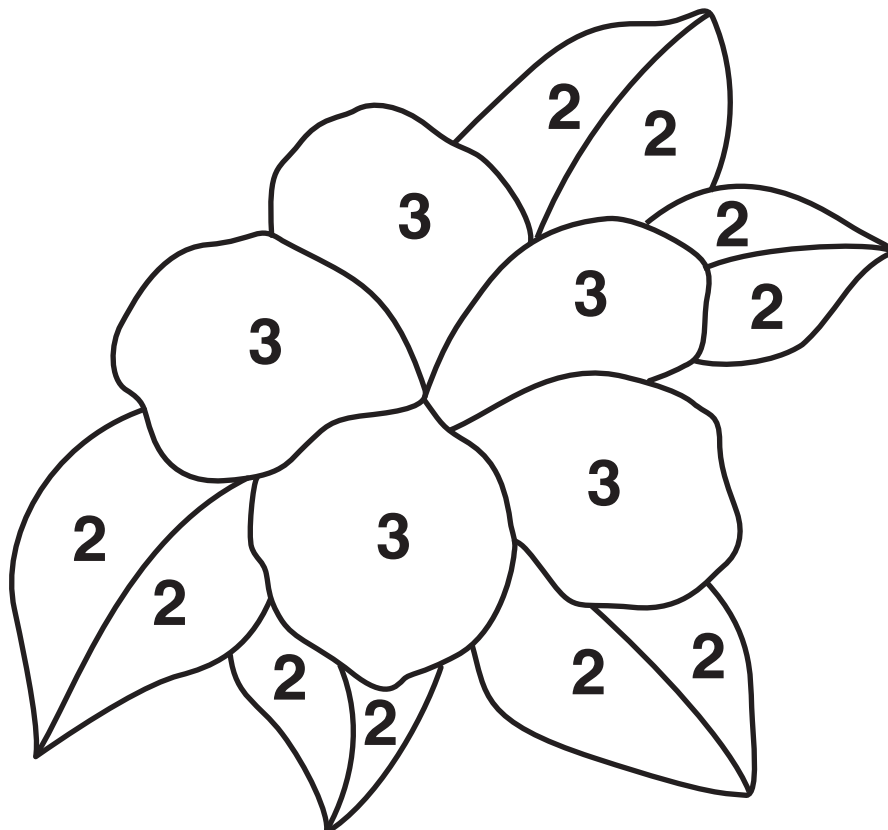

Clear with green fractures
U11-25-96



Light green cathedral
S121SF



Deep purple cathedral
S146SF

INSTRUCTIONS FOR MAKING DECO DISH

1. Kiln wash the ceramic mold. Make sure holes are open and kiln wash is dry before firing.
2. Cut your glass to the enclosed pattern.
3. Grind all edges smooth and straight.
4. Wash and dry all glass pieces. Do not leave any oily finger prints or cutting oil on pieces.
5. Assemble glass pieces in your kiln in the design desired.
6. Wipe off any finger prints or dust. A clean surface makes a perfect result.
7. Set your kiln to fire at 600 degrees per hour until it becomes a full fuse, at approximately 1465 degrees. All kilns vary so watch your piece until it gets to the desired full fuse.
8. Anneal for 20 minutes.
9. Allow to cool naturally.
10. When cool, remove from kiln, wash and dry carefully.
11. Place on top of kiln washed mold and put it back in your kiln.
12. Set your kiln to heat at 400 degrees per hour until it reaches about 1250 degrees. The piece should be fully slumped into the mold. Check your kiln often as temperatures may vary.
13. Anneal for 20 minutes and allow to cool naturally.
14. Remove when kiln is cool, wash, dry and enjoy. You've just made a beautiful new piece. Watch out, this becomes addicting.